

# **Instructions for Replacing Air Cleaner Seals**

## **INNER HOUSING END SEALS**

Model 2200 and 2250 seal is 20.56" long x 6.88" wide.

Model 2400 and 5000 seal is 16.12" long x 6.88" wide.

#### INSTALLATION:

- 1. Remove old seal and scrape smooth.
- Apply 3M spray adhesive or any household adhesive generously to seal installation area.
- 3. For white polyester seal, apply with the scrim (thin polyester sheet) facing up.




# **FOAM OUTER HOUSING SEAL**

Model 2200 seal is 21.20" long x .75" wide.

Model 2400 and 5000 seal is 17.00" long x .75" wide.

#### INSTALLATION:

- 1. Remove old pink seal and scrape smooth.
- 2. Wipe seal installation area clean.
- Remove paper backing from new foam seal and apply to the inside of the Outer Housing on inlet side of rail as shown.

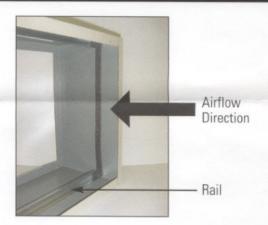

## **DOOR SEALS**

Model 2200 seal is 22.38" long x 8.63" wide.

Model 2400 seal is 17.13" long x 8.63" wide.

#### INSTALLATION:

- 1. Remove old pink seal and scrape smooth.
- Apply 3M spray adhesive or any household adhesive generously to seal installation area.
- Apply new polyester seal with scrim (thin polyester sheet) facing up.



**Older Models** 



**Current Model** 

Remove old foam seal. Press new seal into channel.

RESEARCH PRODUCTS CORPORATION • P.O. BOX 1467 • MADISON, WI 53701-1467 • PHONE: 800-334-6011 • FAX: 608-257-4357 • www.aprilaire.com